

ElectraStat Rubber Flooring - Regular Maintenance Recommendations

GENERAL REMARKS:

Make sure to maintain a good walk-off area in the entrance of your facility to prevent as much dirt from entering the building as possible. Walk-off mats should be used to wipe dirt and grit from shoes and prevent it from being tracked into the building. The walk-off mats should be cleaned at regular intervals so that they can properly fulfill the task they are intended to do. **ElectroStat Rubber floor** coverings have a factory finish which helps to protect the floor covering from scratches and damage during construction. This protective finish must be removed (initial cleaning) before the flooring is used; otherwise it will attract dust and dirt.

GENERAL PRECAUTIONS:

- 1) Never use grit brushes or black, green, or blue pads.
- 2) Initial cleaning procedures shall not be performed within the first 72 hours after installation.
- 3) Do not apply any hard coating to **ElectroStat** rubber flooring.
- 4) Pick up spills right away, if possible.
- 5) Do not use high speed buffing machines.
- 6) Do not use cleaning agents with a pH higher than 12.

ELECTRASTAT RUBBER FLOORING MAINTENANCE

PRODUCT
ELECTRASTAT RUBBER FLOORING

ITEM NUMBER

DATA SHEET



1-877-GND-ZERO (463-9376)
FAX: 941-751-7586
P.O. Box 70
Bradenton, Florida 34207
EMAIL: sales@gndzero.com
www.gndzero.com

Initial cleaning procedures shall not be performed within the first 72 hours after installation.



1.1 Sweep or vacuum the flooring to remove loose dirt.



1.2 Apply a diluted pH neutral cleaner/degreaser such as TASKI Profi and distribute it evenly over the entire area.
DILUTION - 4 ounces per gallon of water



1.3 Let cleaning solution act for 15 - 20 minutes.
IMPORTANT - Do not allow the solution to dry.



1.4a For hammered and smooth surfaces, scrub the area with a single disc machine (150 - 300 RPM) and a soft nylon brush or red pad.

1.4b For round pastille surfaces, scrub the area with a single disc machine (150 - 300 RPM) and a soft nylon brush only.



1.5 Remove (wet vacuum) residue.



1.6 Rinse with clear water and remove.



1.7 Allow the floor to thoroughly dry 1 - 4 hours.



1.8a For hammered and smooth surfaces, dry buff the floor with a single rotary buffing machine and a soft nylon brush or white pad (not to exceed 300 RPM).

Do not heel the machine.

1.8b For round pastille surfaces, dry buff the floor with a single disc rotary buffing machine and a soft nylon brush only (not to exceed 300 RPM).

ELECTRATAT RUBBER FLOORING MAINTENANCE

PRODUCT
ELECTRATAT RUBBER FLOORING

ITEM NUMBER

DATA SHEET



1-877-GND-ZERO (463-9376)
FAX: 941-751-7586
P.O. Box 70
Bradenton, Florida 34207
EMAIL: sales@gndzero.com
www.gndzero.com

Do not heel the machine.

Floors subject to heavy traffic will require more frequent interim care than low traffic areas.

Method 1



1.1 Sweep or vacuum the flooring to remove loose dirt.



1.2 Spot Clean



1.3 Damp mop with TASKI Profi solution. DILUTION - 2 ounces per gallon of water.


Method 2



1.1 Sweep or vacuum the flooring to remove loose dirt.



1.2 Spot Clean

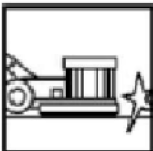

1.3a For hammered and smooth surfaces, dry buff the floor with a single disc rotary buffing machine and a soft nylon brush or white pad (not to exceed 300 RPM). **Do not heel the machine.**
1.3b For round pastille surfaces, dry buff the floor with a single disc rotary buffing machine and a soft nylon brush only (not to exceed 300 RPM). Do not heel the machine.

ELECTRSTAT RUBBER FLOORING MAINTENANCE

PRODUCT
ELECTRSTAT RUBBER FLOORING

ITEM NUMBER

DATA SHEET



1-877-GND-ZERO (463-9376)
FAX: 941-751-7586
P.O. Box 70
Bradenton, Florida 34207
EMAIL: sales@gndzero.com
www.gndzero.com

Method 3 - For Customers Who Prefer a Shiny Floor



1.1 After initial cleaning apply a 50% TASKI Wi-Wax/Water solution on the floor.



1.2 Sweep or vacuum the flooring to remove loose dirt.



1.3 Damp mop with TASKI Wi-Wax solution.
DILUTION - 2 ounces per gallon of water.


Method 4



1.1 Sweep or vacuum the flooring to remove loose dirt.



1.2 Spot Clean

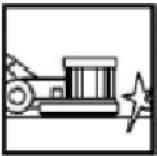

1.3 Spray Buff method using TASKI P44 or TASKI Ultra with a white pad.

ELECTRSTAT RUBBER FLOORING MAINTENANCE

PRODUCT
ELECTRSTAT RUBBER FLOORING

ITEM NUMBER

DATA SHEET



1-877-GND-ZERO (463-9376)
FAX: 941-751-7586
P.O. Box 70
Bradenton, Florida 34207
EMAIL: sales@gndzero.com
www.gndzero.com