


MODEL DC-100

YOU HAVE JUST PURCHASED THE FINEST DEVICE AVAILABLE FOR GROUNDING YOUR CHAIRS, CARTS AND OTHER MOBILE EQUIPMENT COMMONLY FOUND IN YOUR ESD ASSEMBLY AREAS.

THE MODEL DC-100 INCORPORATES THE USE OF ALL STAINLESS MATERIALS.

COMPLETE ASSEMBLY INSTRUCTIONS ARE FOUND ON THE BACK OF THIS PAGE. IF YOU HAVE ANY QUESTIONS, CONTACT OUR OFFICE AT YOUR CONVENIENCE

NOTE: YOUR FLOOR MUST BE EQUIPPED WITH EITHER CONDUCTIVE TILE, OR A CONDUCTIVE WAX OR COATING MUST BE APPLIED. THE SURE-GROUND TAKES ALL STATIC CHARGE TO THE FLOOR TO BE DISSIPATED.

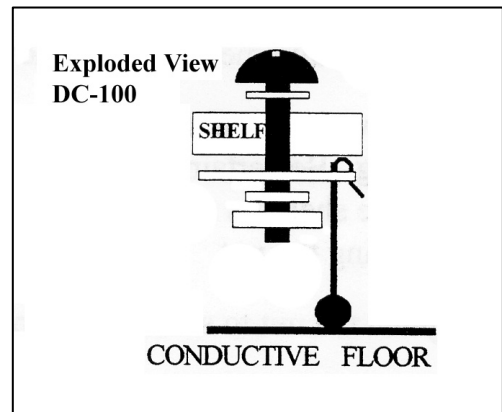

Each package should contain the following parts:

QTY	DESCRIPTION
1	1/4-20 Stainless Bolt
1	Large Stainless Flat Washer w/o cable adjust holes
1	Large Stainless Flat Washer w/ cable adjust holes
1	Stainless Nut
1	Stainless Cable / Ball Assembly

SPECIAL INSTRUCTIONS

- 1) When installing the Model DC-100, be certain to measure the distance from the point of installation on the cart, chair, etc., to the floor. ADJUST THE CABLE LENGTH TO CORRESPOND TO THIS DISTANCE BEFORE FINISHING INSTALLATION.
- 2) Allow for at least 3/4 of slack in the cable to allow for proper "tracking" of the ball when the equipment is being moved.
- 3) Install washers and nut as shown in the drawing. Be certain to loop cable "over".
- 4) Tighten the nut to secure the cable.
- 5) Installation is now complete.

